





RFC-A-CCT-1ZD-IW-BT-W

OPERATION INSTRUCTIONS

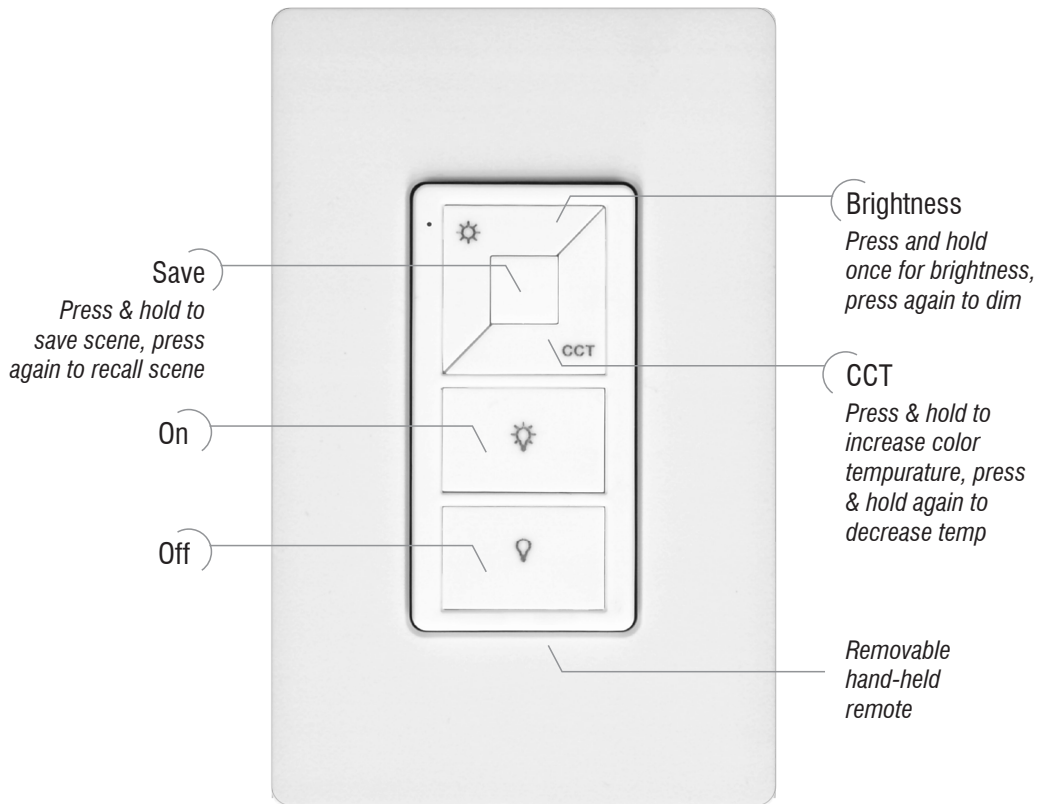

Magnet-Mount, In-Wall Control Station

To remove remote from wall:

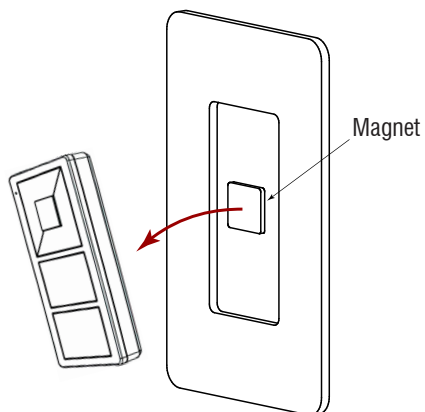

- 1 Pinch edges of remote and pull outward. Magnetic hold will release.
- 2 Return remote to wall station after use to prevent accidental loss.