




RFC-A-CCT-4Z-HH-BT-B

OPERATION INSTRUCTIONS

Handheld Remote Control

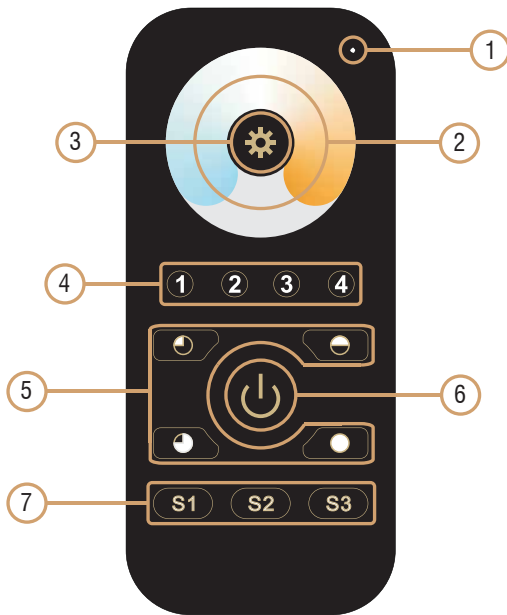

① **Remote Status:** This red LED status light indicates when the remote is on. The remote goes to sleep after 15 seconds of inactivity. If remote is in sleep mode, press any key once to wake up remote before selecting a command.

② **Color Tuning Wheel:** Touch color on touch-sensitive color wheel [🎨] to select desired blend of colors.

③ **Brightness/Dimming Button:** Press and hold the brightness/dimming button [⚙️] to increase brightness of current blended color. After releasing, press and hold again to dim brightness of current blended color.

④ **Zone Control:** Select the zone to be controlled by pressing the zone button [①, ②, ③, or ④] and then making desired adjustments. To control multiple zones simultaneously, first sequentially select the zones to be controlled, then make desired lighting adjustments. Additionally, press and hold a zone button for two seconds to power on/off that particular zone.

⑤ **Brightness Presets:** These four buttons set the current blended color to preset brightness levels: 🌑 for 25% brightness, 🌒 for 50% brightness, 🌓 for 75% brightness, and 🌕 for 100% brightness.

⑥ **On/Off:** The on/off [🔌] button toggles all zones between off and each of their last 'on' settings.

⑦ **Scenes:** Press any of the three scene buttons [S1, S2, or S3] to recall the scene saved to that button. To save a scene to one of the three scene buttons, adjust lighting to desired setting and then press and hold scene button for about two seconds until light flashes to indicate that setting has been saved. *Note: Scenes are saved to specific zones so that each of the four zones has their own three unique scenes.*