




RFC-RGBW-3Z-IW-W

WIRING INSTRUCTIONS

- 1 Remove two white plastic covers on RF receiver. Connect in-wall control station to power supply as shown below. Connect RF receiver to power supply and LED lighting strip(s) as shown below.

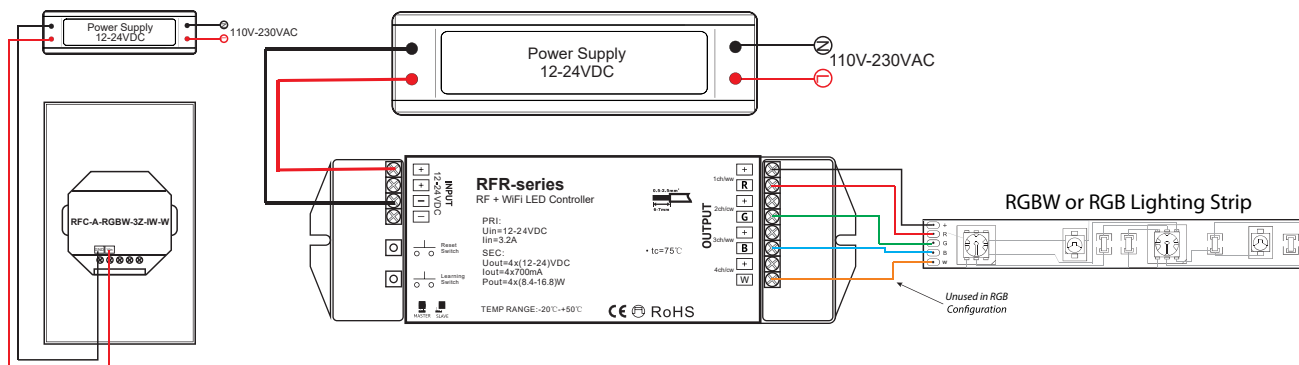

- 2 Once all connections have been made, apply power to in-wall control station and RF receiver.
- 3 Replace two white plastic covers on RF receiver.

PAIRING INSTRUCTIONS

RFC-A-RGBW-3Z-IW-W
In-Wall Control Station



RFR-series
RF Receiver



- 4 Confirm power to RF receiver(s) and in-wall control station(s).
- 5 Wake up the in-wall control station by pressing its power [] button.
- 6 Tap the learn button on the RF receiver.
- 7 Assign the RF receiver to a zone on the in-wall control station by pressing and holding the desired zone button [1 , 2 , or 3] for two seconds, until the light in that zone briefly flashes to indicate assignment was received.*

*Steps 6-7 must be completed within a ten second period

- 8 Repeat steps 6-7 for any additional RF receivers and/or control stations in the system.

Note: Multiple receivers can be assigned to the same zone button. Receivers assigned to the same zone button will function in unison.

Note: One RFR-series receiver can be paired with up to eight different handheld, tabletop, and/or in-wall remote controllers.

Note: To erase all stored pairing memory from RF receiver, press and hold the learning key for five seconds. The connected lights will briefly flash to indicate memory has been erased.