




RFC-A-RGBW-4Z-HH-BT-B

OPERATION INSTRUCTIONS

Handheld Remote Control

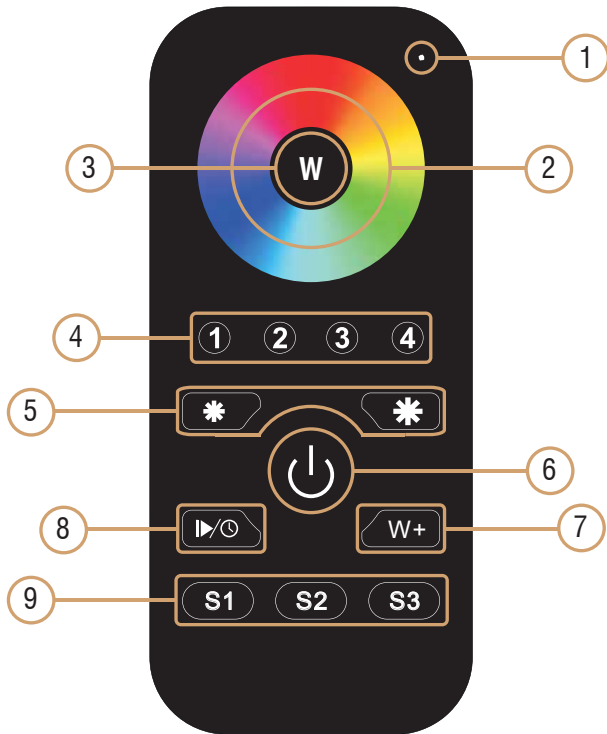

1 **Remote Status:** This red LED status light indicates when the remote is on. The remote goes to sleep after 15 seconds of inactivity. If remote is in sleep mode, press any key once to wake up remote before selecting a command.

2 **Color Wheel:** Touch desired color on touch-sensitive color wheel [🌈] to select light color.

3 **White Channel Button:** Short press white channel button [W] to toggle white channel on/off. Press and hold for white channel dimming. If white channel is off, pressing and holding will begin to slowly increase white channel brightness. If white channel is already on, pressing and holding once will dim white channel. After releasing, pressing and holding again will increase white channel brightness. *Note: This feature is compatible with RGBW product only, not with RGB.*

4 **Zone Control:** Select the zone to be controlled by pressing the zone button [1, 2, 3, or 4] and then making desired adjustments. To control multiple zones simultaneously, first sequentially select the zones to be controlled, then make desired lighting adjustments. Additionally, press and hold a zone button for two seconds to power on/off that particular zone.

5 **Color Dimming/Brightness:** To dim red/green/blue channels, press the [*] button. To increase brightness of red/green/blue channels, press the [*] button.

6 **On/Off:** The on/off [⏻] button toggles all zones between off and each of their last 'on' settings.

7 **White Colors:** The white colors button [W+] toggles between three shades of white: warm white, natural white, and cool white. Double tapping this button will turn red, green, and blue channels off. *Note: This button is intended to be compatible with RGBW product only, not RGB.*

8 **Program:** The program button [▶⏻] is a multi-function button that accesses the remote's ten built-in, preset color changing program modes with the ability to adjust program speed. Press button once to access first built-in color changing mode. Press again to pause this mode. Press a third time to start the next built-in mode, and so on... At any time during a color-changing mode, press and hold the program button to adjust how fast the program changes colors. The first press & hold speeds up the mode. The next press & hold slows down the mode.

9 **Scenes:** Press any of the three scene buttons [S1, S2, or S3] to recall the scene saved to that button. To save a scene to one of the three scene buttons, adjust lighting to desired setting and then press and hold scene button for about two seconds until light flashes to indicate that setting has been saved. *Note: Scenes are saved to specific zones so that each of the four zones has their own three unique scenes.*