




RFC-A-SC-1Z-HH-BT

WIRING INSTRUCTIONS

- 1 Remove white plastic cover and connect power supply & LED lighting strip to the RF receiver as shown below:

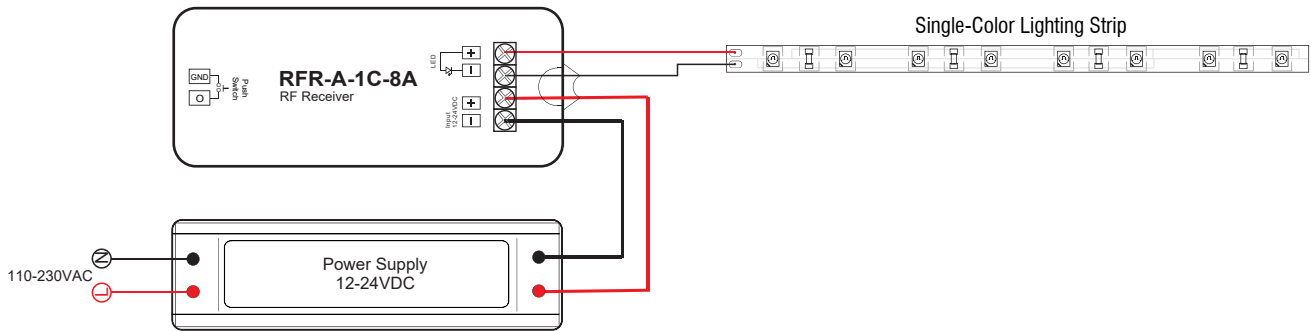

- 2 Replace plastic cover.

PAIRING & OPERATION INSTRUCTIONS

RFC-A-SC-1Z-HH-BT
Push-Button Remote Control



RFR-A-1C-8A
RF Receiver



- 3 Apply power to RF receiver and confirm battery (included) in push-button remote control by pressing button and observing blue status light.
- 4 Pair remote control with RF receiver by first pressing learning key on RF receiver and then pressing button on remote control within eight seconds of each other. Connected lights will briefly flash to indicate assignment was received.
- 5 Repeat step 5 for any additional RF receivers and/or remote controls in the system.

- 6 To operate system, short press button on remote control to turn lights on/off. Long press button on remote control to adjust brightness up/down.

Note: Multiple receivers can be assigned to the same remote control. Receivers assigned to the same remote control will function in unison.

Note: One RFR-A-1C-8A receiver can be paired with up to eight different remote controls.

Note: To erase all stored pairing memory from RF receiver, press and hold the learning key for six seconds. The connected lights will briefly flash to indicate memory has been erased.