


#### **HLV192**

#### **INSTALLATION INSTRUCTIONS**


1) Orient power supply in desired position

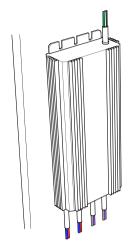


Refer to HLV192 Wiring Options (next page) to configure setup for the appropriate application



2 Secure power supply to mounting surface

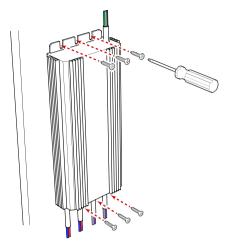

 4 Confirm mounting postion and wiring figuration are as desired.




Customer Service | 800-789-3810 | service@kelvix.com 041018NH




#### **HLV192**

WIRING OPTIONS


## PRIMARY SIDE DIMMING (120V ONLY)

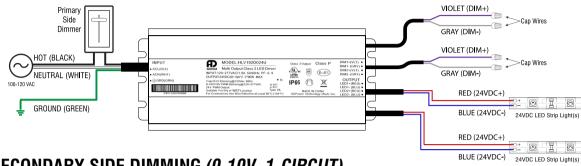


## **SECONDARY SIDE DIMMING (0-10V, 1-CIRCUT)**

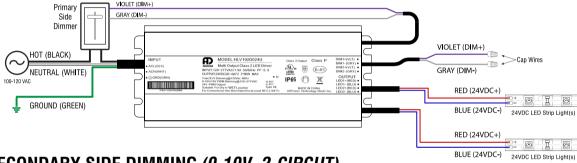

## **SECONDARY SIDE DIMMING (0-10V, 2-CIRCUT)**

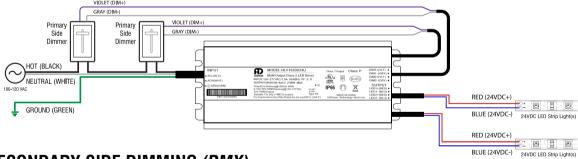

# **SECONDARY SIDE DIMMING (DMX)**

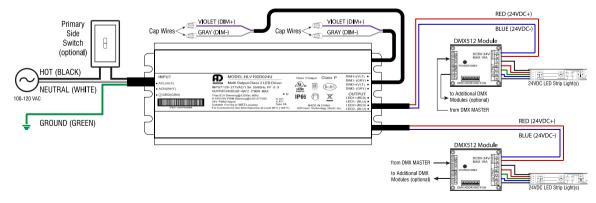

Customer Service | 800-789-3810 | service@kelvix.com 041018NH